

NEMCO Food Equipment

301 Meuse Argonne,
Hicksville, Ohio 43526 PHONE (419) 542-7751

OPERATING INSTRUCTIONS FOR CONNOLLY ROLL-A-GRILL by NEMCO 8048-BW BUN WARMER

TO USE:

1. PLUG UNIT INTO A GROUNDED OUTLET WITH CORRESPONDING VOLTAGE.
2. TURN ON WARMER USING ROCKER SWITCH. UNIT WILL HEAT TO APPROXIMATELY 150 DEGREES F.
3. ALWAYS KEEP ROLLS IN A PLASTIC BAG. BY DOING THIS, THE ROLLS WILL ALWAYS BE WARM AND SOFT. THIS METHOD KEEPS THE MOISTURE IN THE ROLLS.
4. TURN UNIT OFF, WHEN NOT IN USE

UNPLUG THE UNIT BEFORE CLEANING.

CLEANING:

THIS UNIT CAN BE CLEANED WITH A DAMP SPONGE AND MILD SOAP.

DO NOT IMMERSE!

SERVICE PARTS LIST

<u>Part #</u>	<u>Qty. Required</u>	<u>Description</u>
47214	1	POWER CORD 16/3
47216	1	STRAIN RELIEF
47234	1	ELEMENT 220 VOLT
47233	1	ELEMENT 120 VOLT
47231	1	ROCKER SWITCH 120V/220V
46983	1	WATER PAN
46295	2	DRAWER ROLLERS SET (EACH SIDE)
80100	1	DRAWER COMPLETE
47817	1	DRAWER REMOVABLE BASE
80017	4	FOOT